


## HKPS Undervoltage Circuit Bypass

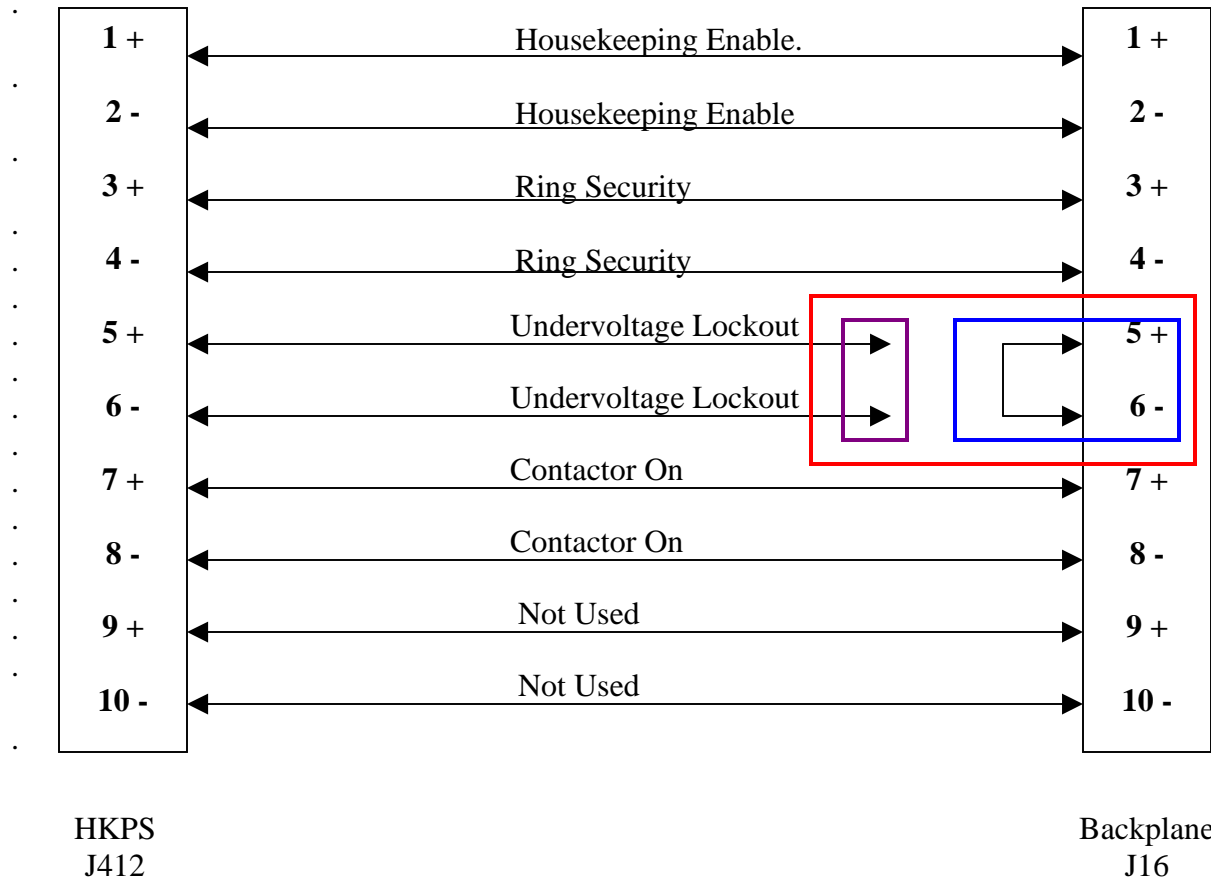

### Instructions:

- 1) Remove wires from J16-5 and J16-6
- 2) Do not cut crimp pins off but rather securely Tape Pins for possible later use
- 3) Install a Jumper into J16-5 to J16-6

Reference: HKPS Schematics